




Appy a bid of silicone and hang the cabinet (D) on the brackets.



Attach the wall brackets (E) to the wall with the screws (F).

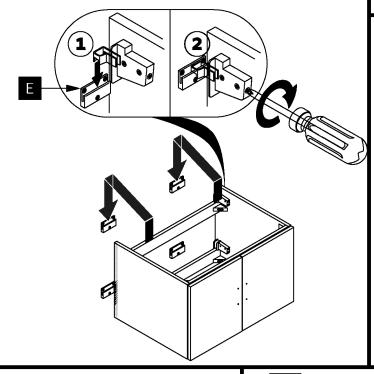











IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.


 $m{4}$ Attach the handles to the cabinet.

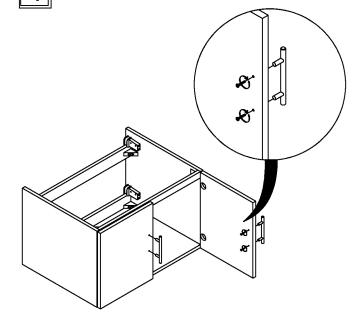


Assembly is complete

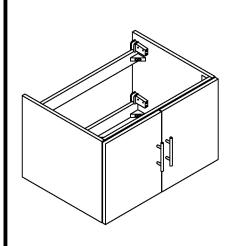



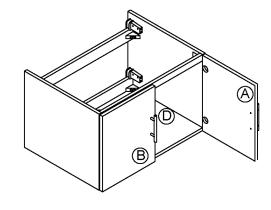

PART#	DESCRIPTION	QUANTITY
Α	Door (left)	1
В	Door (right)	1
С	Hinge (door)	4
D	Hendle	2





PART LIST